



Please ensure that the input power cable is connected to the clamp with the red arrow (+10%) . If it is installed on the clamp with the green arrow(230V) please remove and switch to the clamp with the red arrow (+10%)



Please ensure that the input power cable is connected to the clamp with the red arrow (+10%). If it is installed on the clamp with the green arrow (230V) please remove and switch to the clamp with the red arrow (+10%)